


**NISSAN RE5R05A  
TORQUE CONVERTER CLUTCH SHUDDER  
AND/OR INTERMITTENT SOLENOID/PRESSURE SWITCH CIRCUIT FAULTS**

**NISSAN RE5R05A SOLENOID LOCATIONS AND OHM VALUES**

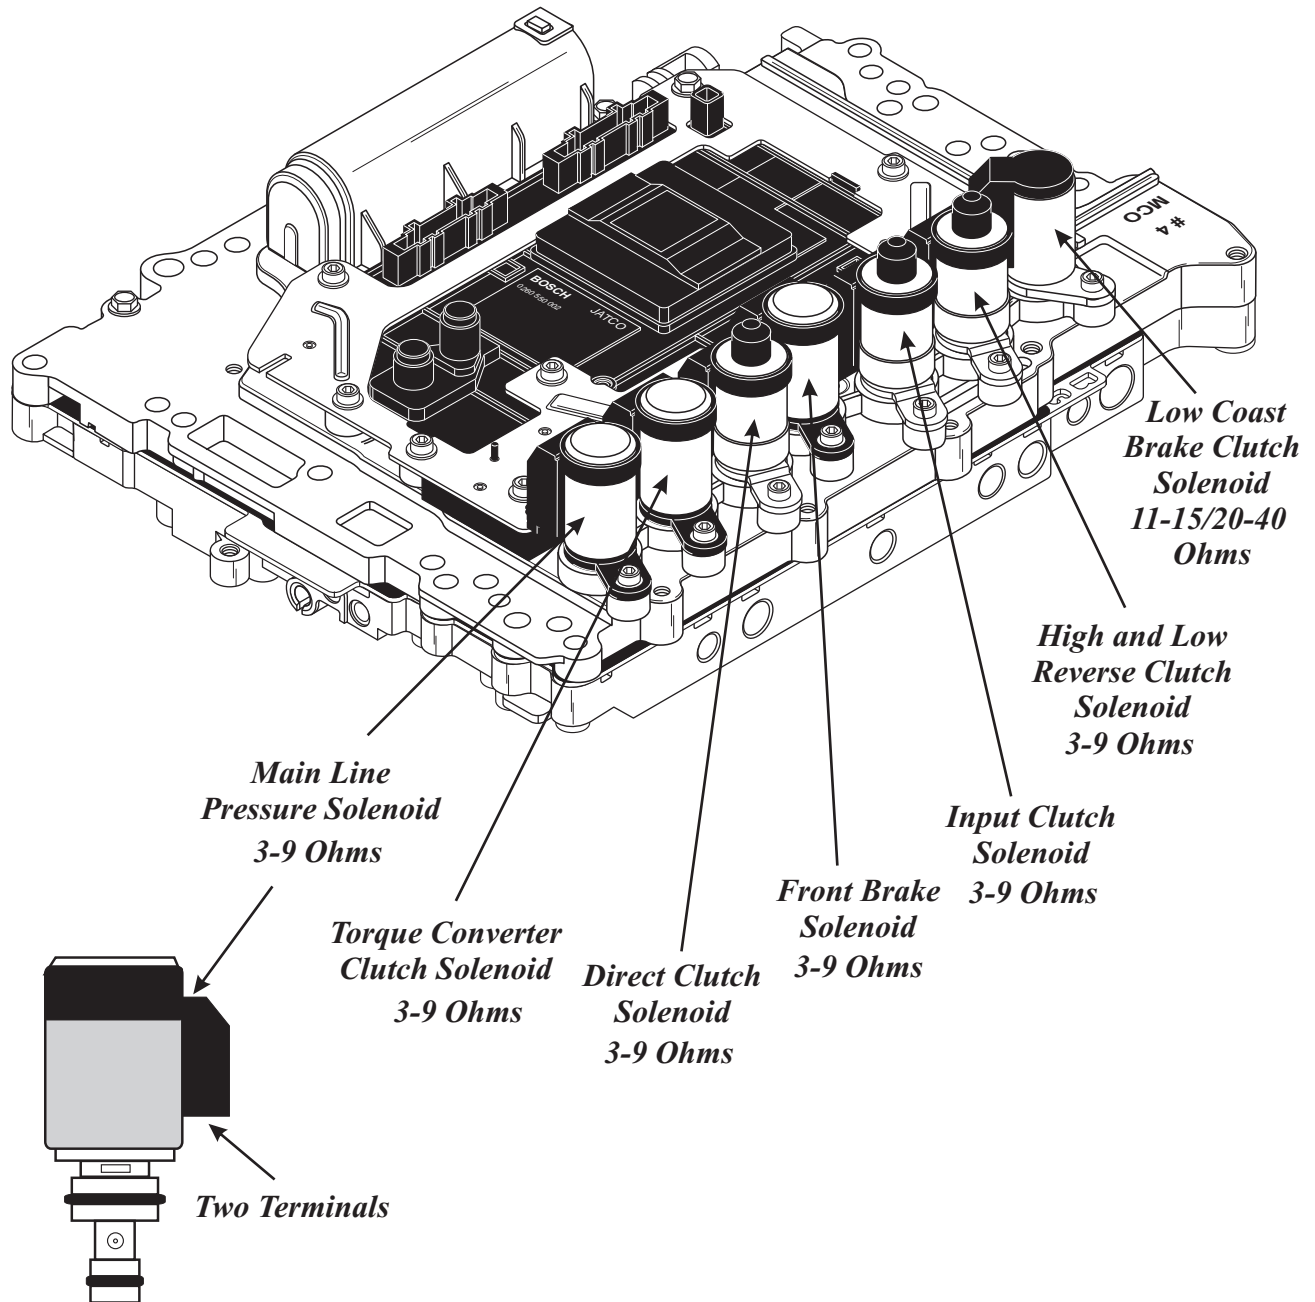

*Example: Line Pressure Solenoid. Connect terminals of Ohm meter to the two terminals in the solenoid shown above, the resistance value should be 3-9 Ohms.*

*Note: Be Careful not to break the solenoid as it is usually difficult to remove out of the Valve Body. A simple Punch from the bottom of the Channel plate, to the snout of the solenoid can ease the removal of the solenoids.*

Copyright © 2010 ATSG

Figure 3  
Automatic Transmission Service Group